

TempTale Manager® Desktop 8.0 Download and Installation Instructions

Sensitech TempTale Manager® Desktop (TTMD) 8.0 is available for download from the Web.

Getting Started

Before installing TTMD 8.0, confirm that your system meets the necessary hardware and software system requirements shown below.

Minimum System Requirements

- 1 GHz 64-bit(x64) or faster processor
- A hard drive with a minimum of 1200 MB of available disk space
- MS .NET Framework 3.5 (Service Pack 1)
- Windows 10 Pro (64-bit), Windows 8.1 Pro (64-bit), or Windows 7 Pro (64-bit) operating systems
- A mouse or other pointing device
- For users downloading monitor data, a serial Interface Plus Reader connected to a COM port or a USB Interface Plus Reader directly connected to a USB port
- A VGA monitor (supported resolutions are: 1024 x 768, 1280 x 1024, 1400 x 1050, and 1680 x 1050)
- For users who need to print, a printer connected to a PC directly or through a network
- Administrator account for the computer on which you are installing TTMD 8.0

Download Instructions

To save the installation package to your PC:

1. In the email that was sent to you, click the link to open the Download Web page.
2. In the download options dialog box that opens, select **Save** or **Save As** to download the installation package to your PC.
3. Advance to the Software Installation instructions on the next page.

Software Installation

To install TTMD 8.0:

1. Log on to the computer as **Administrator**. (You cannot install the software on a Windows-based system without having Administrator access).
2. Open the folder containing the TTMD 8.0 installation package.
3. Double click the setup file.
4. If prompted to install driver software, click **Next**, and then follow the on-screen instructions.
5. Click **Finish** in the **Installation Successful** confirmation box.
6. If prompted to install an additional driver, repeat the actions in Steps 4 and 5.
7. In the **Choose Setup Language** dialog that opens, select a language from the drop-down menu, and then click **OK**. (The system automatically defaults to the language of your computer's operating system.) The **InstallShield Wizard for TempTale Manager Desktop 8.0** opens.

Note: If you receive a message that MS .NET Framework 3.5.1 is not installed, follow the prompts to install it, and then continue with the TTMD 8.0 installation procedure.

8. In the License Agreement window that opens, click **Accept**.
9. In the next window, accept the default installation destination folder, or click **Change** to browse to the directory in which you want TTMD installed. (C:\Program Files (x86)\Sensitech\TempTale Manager DeskTop is the default directory.) Click **Next**.
10. In the next window, do one of the following, and then click **Next**.
 - a. Keep the default option, **Enabled**, if you want the system to open a Login window in which users must enter login ID and password before TTMD will launch.
Note: Select **Enabled** if your SOP requires it.
 - b. Select **Disabled** if you want the system to bypass the Login window and launch TTMD automatically. **(The majority of users will want to select Disabled.)**
11. The next window prompts you to select to install TTMD 8.0 for “**Anyone who uses this computer (all users)**” or “**Only for Me**”.
 - a. If you select “**Anyone**,” TTMD 8.0 will be available to all users of the computer, regardless of logon user ID. **(The majority of users will want to select Anyone.)**
 - b. If you select “**Only Me**,” TTMD 8.0 will only be available for the user ID you are currently logged in with.
12. After you receive a message that installation was successful, click **Finish**. The installation program adds an icon (application shortcut) to your desktop.
13. Click the **TTMD icon** to start the application.

14. If you selected **Enabled** in Step 10, the TTMD login window opens. Enter the following:

Login: admin

Password: password

15. Click **Login** to open the application.

This completes the TTMD 8.0 download and installation procedures.